

XP USERS

Network Connectivity

Identify network adapter driver version on Windows* XP or Windows Server* 2003

The network adapter property sheet in Microsoft Windows* XP or Windows Server* 2003 provides information on the network adapter, driver version, and Intel® PROSet for Windows Device Manager version.

Use one of the following methods to access the network adapter properties.

Device Manager
My Computer Icon
Network Connections
System Tray Icon

Device Manager

Click Start » Control Panel.
Double-click the System icon. Note: Select Switch to classic view if the system icon is not visible.
Click the Hardware tab.
Click Device Manager.
Click the + symbol in front of Network Adapters to expand the section.
Right-click the Intel Network Adapter name.
Click Properties.
Click the Driver tab to see the driver version.
Click the Link Speed tab to see the Intel® PROSet version. NOTE: The Link Speed tab will not appear if Intel® PROSet is not installed.

My Computer Icon

Right-click the My Computer icon located on the Desktop.
Click Properties.
Click the Hardware tab.
Click Device Manager.
Click the + symbol in front of Network Adapters to expand the section.
Right-click the Intel Network Adapter name.
Click Properties.
Click the Driver tab to see the driver version.
Click the Link Speed tab to see the Intel PROSet version. NOTE: The Link Speed tab will not appear if Intel® PROSet is not installed.

Network Connections

Click Start » Control Panel.
Click Network Connections. Note: If Network Connections is not visible, select Network and Internet Connections » Network Connections.

Right-click Right-click the Intel Network Adapter name.
Click Properties.
Click Configure.
Click the Driver tab to see the driver version.
Click the Link Speed tab to see the Intel PROSet version. NOTE: The Link Speed tab will not appear if Intel® PROSet is not installed.

System Tray Icon

Right-click the network system tray icon (the icon that displays two computer monitors).
Click Open Network and Connections.
Right-click the Intel Network Adapter name002E
Click Properties.
Click Configure.
Click the Driver tab to see the driver version.
Click the Link Speed tab to see the Intel PROSet version. NOTE: The Link Speed tab will not appear if Intel® PROSet is not installed.